Installation, Operation and Service Instructions

INFRARED HEATERS




SERIES GRT

Two-Stage





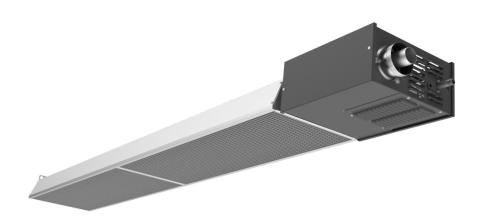

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

FOR YOUR SAFETY

Do not store or use flammable vapors and liquids in the vicinity of this or any other appliance.

If you smell gas:

- 1. Open windows
- 2. Don't touch electrical switches
- 3. Extinguish any open flame
- 4. Immediately call your gas supplier

OWNER

Retain this Manual & ensure available for Service.

Improper installation, adjustment, alteration, service or maintenance can cause injury, death or property damage.

Read the installation, operation and service instructions thoroughly before installing or servicing this equipment.

INSTALLER

Provide Manual to Owner upon completion of installation!

Read and thoroughly understand these Instructions before attempting any installation

Note: Not for Installation in Mobile Homes or Recreational Vehicle.

Canada: 563 Barton Street, Stoney Creek, Ontario L8E 5S1

USA: 315 N Madison Street, Fortville, IN 46040

www.superiorradiant.com

CAUTION: FIRE OR EXPLOSION HAZARD

Maintain clearance to combustible materials as further specified in this manual. Failure to do so could result in a serious fire hazard. Heaters should not be located in hazardous atmospheres containing flammable vapors or combustible dusts. Signs should be provided in storage areas specifying maximum safe stacking height.

CAUTION: MECHANICAL HAZARD

This equipment expands and contracts with each operating cycle. The gas connection, suspension hardware and the installation itself must safely allow this movement. Failure to do so could result in serious fire or explosion hazard.

CAUTION: FIRE OR EXPLOSION HAZARD

This heater is equipped with an automatic ignition device. Do not attempt to light the burner by hand. Failure to comply could result in a serious fire and personal injury hazard.

CAUTION: MECHANICAL HAZARD

Do not use high pressure (above 1/2 psi) to test the gas supply system with the burners connected. Failure to do so could result in damage to the burner and its control components requiring replacement.

CAUTION: SERVICE LIFE RISK

Do not install equipment in atmospheres containing halogenated hydrocarbons or other corrosive chemicals. Failure to do so may lead to premature equipment failure and invalidation of the warranty. Additionally, it is recommended that the equipment be installed with a slope downward and away from the burner of 1/4" inch in 10' feet to allow start-up condensate drainage.

Table of Content

Table of Content	2
Introduction	4
Installation Codes	4
General Specifications	6
Gas Supply	6
Inlet Pressure	
Manifold Pressure	
Electric Supply	
Heater Specifications	
Venting	
· ·	
Clearance to Combustibles	
Installation Detail	
Installation Sequence	9
Outdoor Installation	10
Venting / Combustion Air Ducting	
General Requirements	12
Optional Horizontal Elbow Vent Terminal	14
Roof Venting	15
Gas Piping	16
General Requirements	16
Electrical Wiring and Controls	17
General Requirements	17
Controls	17
Operation / Maintenance	20
Starting Sequence of Operation	20
Maintenance	20
Trouble Shooting	21
Troubleshooting Chart	22
Replacement Parts	23
Warranty	24

Introduction

Superior Radiant Products is a company in the infrared heating industry founded on the principles of product quality and customer commitment.

Quality commitments are evidenced by superior design, a regard for design detail and an upgrade of materials wherever justifiable.

Customer commitment is apparent through our ready responses to market demands and a never-ending training and service support program for and through our distributor network.

Important

These instructions, the layout drawing, local codes and ordinances, and applicable standards such as apply to gas piping and electrical wiring comprise the basic information needed to complete the installation and must be thoroughly understood along with general building codes before proceeding.

Only personnel who have been trained and understand all applicable codes should undertake the installation. SRP Representatives are Factory Certified in the service and application of this equipment and can be called on for helpful suggestions about installation.

Installation Codes

Installations must comply with local building codes, or in their absence, the latest edition of the national regulations and procedures as listed below.

General Installation and Gas Codes

Heaters must be installed only for use with the type of gas appearing on the rating plate, and the installation must conform to the National Fuel Gas Code, ANSI Z223.1/NFPA 54 in the USA and CSA B149.1 and B149.2 Installation Codes in Canada.

This heater maybe approved for either indoor or outdoor installation. Not for use in residential dwellings, refer to Rating plate.

Aircraft Hangar Installation

Installation in aircraft hangars must conform to the Standard for Aircraft Hangars, ANSI/NFPA 409 in the USA and CSA B149.1 and B149.2 Installation Codes in Canada.

Public Garage Installation

Installation in public garages must conform to the Standard for Parking Structures, NFPA-88A or Standard for Repair Garages, NFPA 88B, in the USA and CSA B149.1 and B149.2 Installation Codes in Canada.

Parking Structures

Technical requirements are outlined in ANSI/NFPA 88B (USA)

Gas Supply Lines

The appliance must be isolated from the gas piping system by closing equipment shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.45 kPa)

Electrical

All heaters must be electrically grounded in accordance with the National Electric Code, ANSI/NFPA 70 in the USA and the Canadian Electric Code, CSA C22.1 in Canada, and must comply with all local requirements.

Venting

Refer to the National Fuel Gas Code, ANSI Z223.1 (NFPA 54) in the USA and CSA B149.1 and B149.2 Installation Codes in Canada for proper location, sizing and installation of vents as well as information on clearance requirements for conventional venting methods. See page 11 for horizontal venting requirements.

This appliance shall not be connected to a chimney flue serving a separate solid fuel burning appliance.

High Altitude

When installing this appliance over 4500 ft. above sea level in Canada, the appliance must be properly de-rated and installed according to local codes. In the absence of local codes, the appliance must be de-rated in accordance with the most recent CSA - B149 code.

In the United States for installations over 2000ft above sea level the appliance must be installed in accordance with the Current National Fuel Gas Code, ANSI Z223.1/NFPA 54.

Safety Features

This heater utilizes an airflow switch as blocked vent shut off system. This system is designed to prevent the operation of the appliance if a fresh air supply is blocked or if the flue exhaust is blocked. If this system fails to operate DO NOT ATTEMPT ADJUSTMENTS. Disconnect power to the appliance and contact a qualified service person.

General Specifications

Gas Supply

_		_			
ln	let	Pr	26	SI	ire

Natural Gas: Minimum 5.0" W.C. <u>Propane Gas</u>: Minimum 11.5" W.C.

Maximum 14.0" W.C. Maximum 14.0" W.C.

Manifold Pressure

Natural Gas: 3.5" W.C. (High Rate) Propane Gas: 10.5" W.C. (High Rate)

2.0" W.C. (Low-Rate) 5.4" W.C. (Low Rate)

Inlet Connection

Natural Gas or Propane Gas: 1/2" NPT. Female

Electric Supply

120 VAC, 60 Hz, 1 Amp: Heater includes a 36" power cord with grounded 3 prong plug.

Heater Specifications

Input: 45,000 BTU/h / 30,000 BTU/h

Weight: 100 lbs (45 Kg)

Venting

Horizontal venting: Maximum air vent / flue for either rate is 10' feet

Roof Venting: Refer to ANSI Z223.1 and CSA B149.1 and B149.2 fan assisted appliances for correct sizing.

Flue Dia.: 2" diameter (installed concentrically)

Note: The heater includes a horizontal vent installation kit. The kit contains all components necessary to

vent the heater horizontally and is required.

A vertical vent kit is available as an alternate venting method. This Kit Part # RS022 is available through SRP distributors and contains the appropriate adapters to allow the connection of B-vent

material. See roof-venting in this manual.

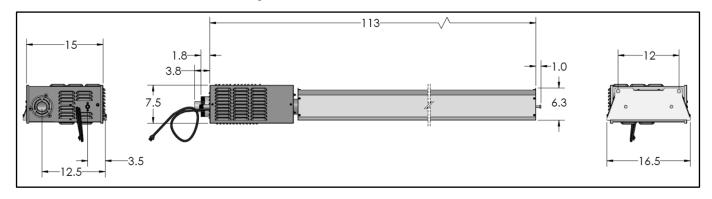


Figure 1: Overall Dimensional Information

Clearance to Combustibles

It is very important to observe the minimum clearance to combustibles at all times to avoid any possibility of property damage or personal injury.

WARNING

Clearances as marked on the heater body must be maintained from vehicles parked beneath. Signs should be posted identifying any possible violation of the clearance distances from the heater in all vehicle areas. Maximum allowable stacking height in storage areas should be identified with signs or appropriate markings adjacent to the thermostat or in a conspicuous location.

Table 1 lists the minimum clearance to combustible materials for various installation configurations. Additional clearance may be required for glass, painted surfaces and other materials which may be damaged by radiant or convective heat.

<u>Combustible materials</u> are considered to be wood, compressed paper, plant fibres, plastics, Plexiglas or other materials capable of being ignited and burned. Such materials shall be considered combustible even though flame-proofed, fire-retardant treated or plastered.

The stated clearance to combustibles represents a surface temperature of 90°F (50°C) above room temperature. Building materials with low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc....) maybe subject to degradation at lower temperatures. It is the installer's responsibility to assure that adjacent materials are protected from degradation.

It is important to observe minimum clearance to combustibles at all times to avoid any possibility of property damage or personal injury. Clearances must be maintained from vehicles parked beneath heaters. Signs should be posted identifying any possible violation of the clearance distances from the heater in vehicle areas. Also, maximum allowable stacking height in storage areas should be identified with signs or appropriate markings. Figure 2 shows minimum clearance to combustible materials.

Configuration	Dimension	45,000 BTU/h
Standard	Α	2″
	В	18″
	С	50″
	D	18″
45° Tilt	A	3″
	В	3″
	С	48″
	D	48″
Vented	End	5"

Table 1: Clearance to Combustible Table

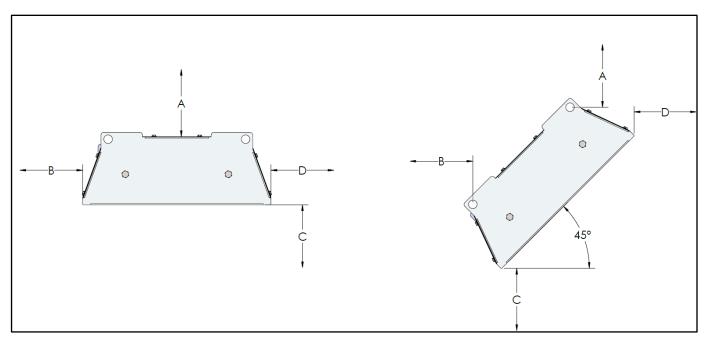


Figure 2: Clearance to Combustible Diagram

CAUTION

In all cases, the minimum hanging height from the floor shall be:
In Canada: 7' feet In USA: 8' feet

Installation Detail

Installation Sequence

The heater is sent with all parts necessary for installation with the exception of chain.

It is recommended that the heater be hung as high as possible and along an uncluttered wall to give the reflector a widest possible "view" of the space to be heated. Avoid installation directly over vehicle parking, over cabinets, or where an open door will interfere. Adhere to minimum clearances on the rating plate.

Leave adequate space around the burner box for future servicing.

Choose a location that permits easy installation of exterior venting. A horizontal vent length up to 10' feet is allowed. For vertical venting adhere to local venting tables and methods.

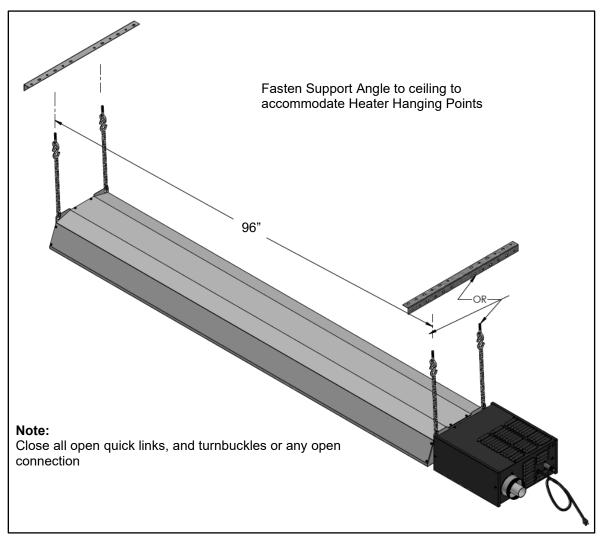


Figure 3: General Overview of Components Utilized in the Installation

As required, fasten hanging angles to ceiling such that heater-hanging points can be accommodated.

Each hanging point must be able to hold at least 150 lbs.

Allow for movement of heater during expansion and contraction during operating cycle.

Heater must fire horizontally. To tilt reflector at 45°, lengthen two of the hanging points to an appropriate length using chain. (Each chain length will be approximately 12" inches longer than the high side of the heater). **SRP** recommends and make available "quick links" for connecting chain. If any open ended "S" hooks and turnbuckles are used, the open ends must be closed to avoid unhooking chain with inadvertent contact.

Outdoor Installation

For outdoor installations the heater must be installed **not more** than 8" from beneath awnings and **not less** than 24" from back and side as shown in Figure 4. If the heater cannot be protected from the elements by an overhang, then a protective cover must be installed.

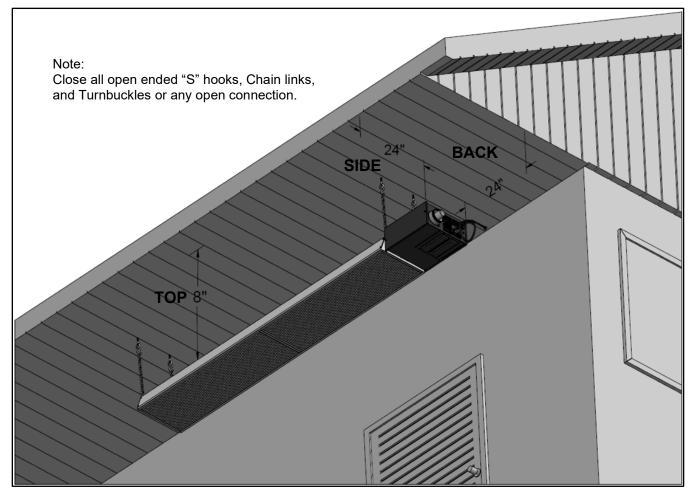


Figure 4: Outdoors Heater Installation

When the heater is installed with back and side dimensions greater than the minimum of 24" then the top dimension may be increased. The new maximum Top dimension is 1/3 of the smallest side or back clearance.

Example:

Given: Side dimension = 36"

Back dimension = 48"

A ratio of 3:1 must be maintained

The side dimension gives us a maximum Top dimension of (36/3)" = 12" The back dimension gives us a maximum Top dimension of (48/3)" = 16" The new Top dimension is 12", the lesser of the two.

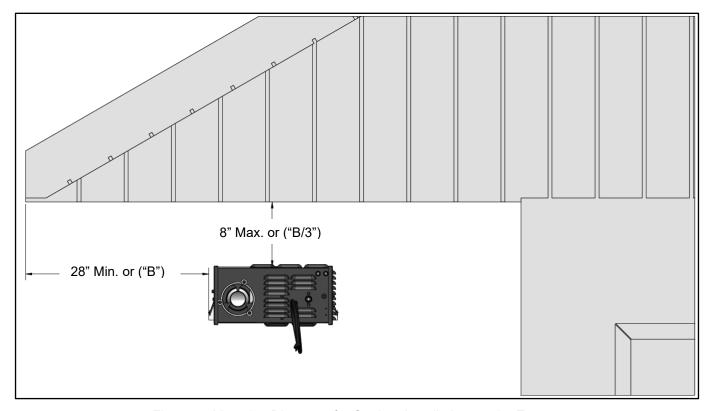


Figure 5: Mounting Distances for Outdoor Installations under Eaves.

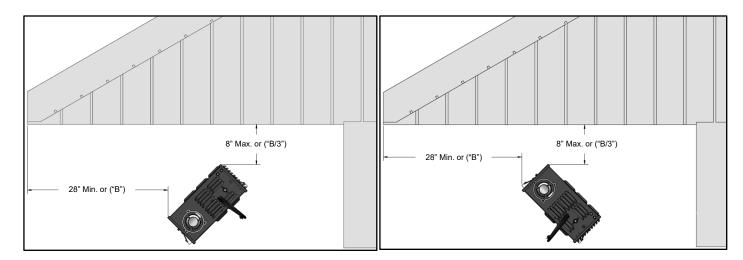


Figure 6: Mounting Distances for Tilted (45°) Outdoor Installations under Eaves.

In the case where the heater is installed at a 45° angle, the minimum dimension inside the overhang is 28" from both the back and side of the burner box and 8" maximum on the top. If the side or back dimensions are increased, then the top clearance may be increased using the same rules as for a horizontal installation.

NOTE: These dimensions are only for satisfying outdoor heater positioning. Clearance to combustibles must also be satisfied.

When a heater is installed outdoors without the presence of an adequate eave, then a protective cover must be installed. This cover is available from your local dealer (Part # RS020).

Venting / Combustion Air Ducting

General Requirements

- Refer to the National Fuel Gas Code, ANSI Z223.1 (NFPA 54) in the USA and CSA B149.1 and B149.2
 Installation Codes in Canada, as well as all local requirements for vertical venting and general guidance for minimum distances to openings to the building.
- This equipment is of balanced flue construction and must **be horizontally vented** (see Figure 7). Vertical venting is permitted, but not as a balanced flue assembly. (See roof venting)

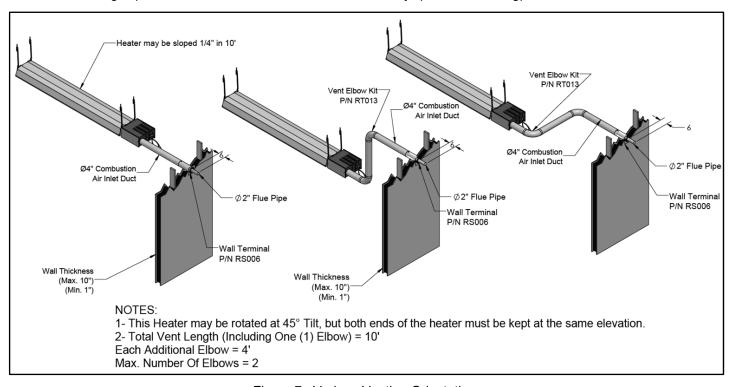


Figure 7: Various Venting Orientations

- A flue/air vent length of 8 feet or less is recommended, although a maximum of 10' feet is allowable (including one elbow).
- An approved Wall Terminal that allows the air duct to pass through the wall is required. This is included
 with your heater. The Wall Terminal is a zero-clearance terminal for both combustible and non-combustible
 walls.
- For horizontal venting where an elbow is utilized an elbow kit (Part No. RT013) must be used, refer to Figure 9 for more details.
- The 2"-inch flue pipe should extend a minimum of 6" inches beyond the end of the 4" inch wall terminal (for horizontally vented heaters only see Figure 9). Where the vent is under an eave the 2" vent pipe must have a minimum clearance of 7" from the centerline of the vent to the bottom of the eave, refer to Figure 8.
- However, when the 2" pipe is less than 18" from the bottom of the eave, we recommend the 2" inch flue extend just beyond the eave to prevent the possibility of frost. (Adhere to any code requirements or clearances to opening in the building).

Series GRT Page 12 LT327 Jan. 26, 2023

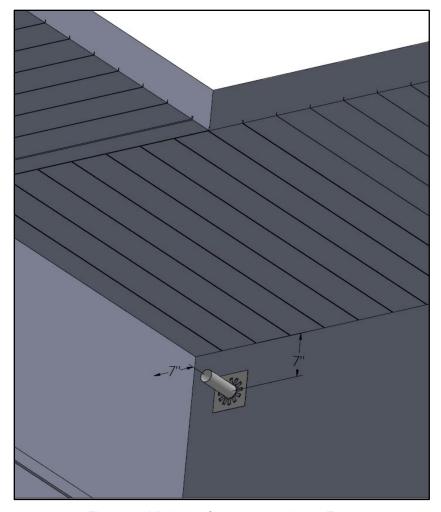


Figure 8: Minimum Clearance under an Eave

- An optional "Horizontal Elbow Vent Terminal" kit for horizontal venting is also available; refer to Figure 9 and Figure 10.
- The 2"-inch flue vent is inside (concentric with) the 4"-inch combustion air inlet duct. Each of the former must
 be seamless and all joints must be fastened with screws and sealed with GE RTV-106 high temperature
 sealant (or equivalent) refer to Figure 9. The exposed 4" combustion air intake pipe is zero clearance
 throughout its length.

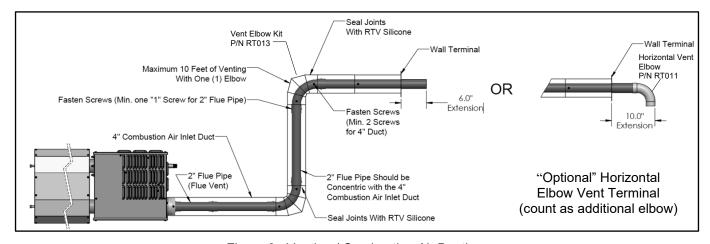


Figure 9: Venting / Combustion Air Ducting

Optional Horizontal Elbow Vent Terminal

The GRT Models are approved to be used with an Elbow as a Horizontal Vent Terminal see Figure 10 for installation details.

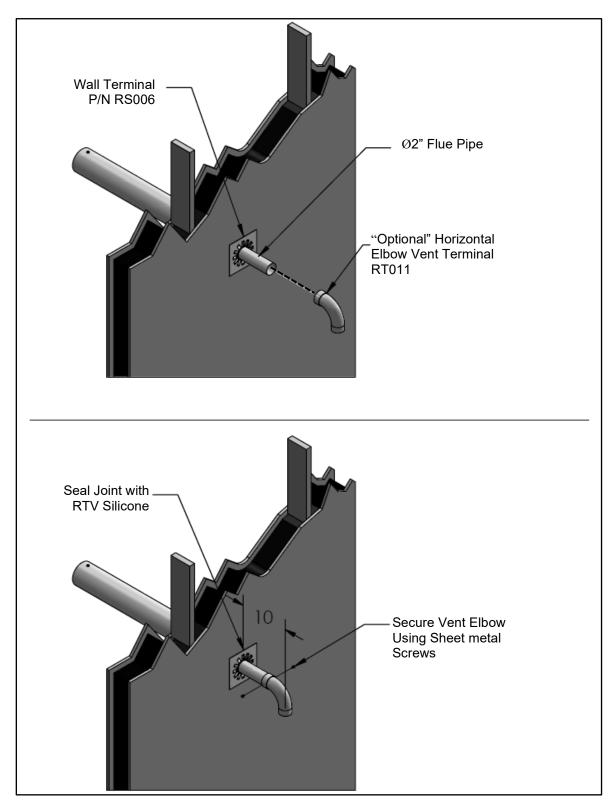


Figure 10: Optional Horizontal Elbow Vent Terminal / Installation.

Roof Venting

When heater is to be vented through a roof (Vertical Venting) this heater is considered as a Category I appliance, a B-Vent adapter kit (Part # RS022) must be used. The B-vent must be installed in accordance to the *National Fuel Gas Code, ANSI Z223.1 (NFPA 54)* in the USA and *CSA B149.1 and B149.2 Installation Codes* in Canada. Refer to the former for correct sizing. Refer to Figure 11 for general overview.

Combustion air may be supplied from the outdoors using the material provided in the vent adapter kit (Part # RS022) available from your local dealer. Maximum length of fresh air is 10 feet including one elbow. Fresh air ducting is not provided in the kit.

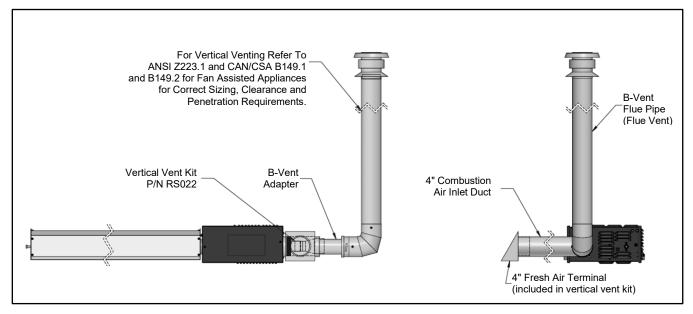



Figure 11: Roof Venting / Combustion Air Ducting

The B-vent adapter must be secured with screws and sealed with high temperature silicone sealant. Install B-vent as per local code requirements.

Gas Piping

General Requirements

- The gas meter and service must be sufficiently large to supply gas to the connected building gas load including the heating equipment and any other gas-fired equipment. Additionally, the gas distribution piping must be designed according to local and national ordinances. Generally (low pressure) systems designed with a maximum 1/2"-inch W.C. total pressure drop meet this requirement.
- Gas supply pipe sizing must be in accordance with the *National Fuel Gas Code*, *ANSI Z223.1 (NFPA 54)* in the USA and *CSA B149.1 and B149.2 Installation Codes* in Canada.
- Before connecting burners to the gas supply system, verify that high pressure testing of the system has been completed. Failure to do so may expose the burner components to damaging high pressure, requiring replacement of key components.
- Flexible gas connectors of approved type must be installed as shown in Figure 12, in one plane, and
 without sharp bends, kinks or twists. A smooth loop of approximately 12" inches in diameter is best. Failure
 to install the gas connection in the approved manner will result in a hazardous and potentially deadly
 situation due to the movement of the heat exchanger and burner in the normal course of operation.

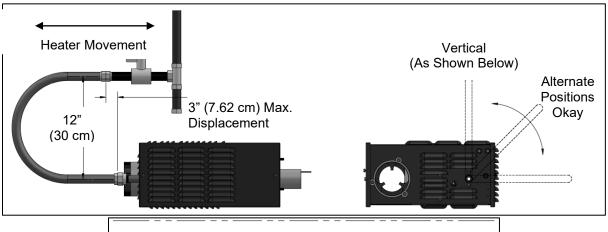

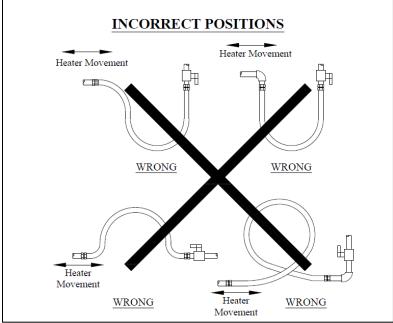


Figure 12: Flexible Gas Connection

Electrical Wiring and Controls

General Requirements

In all cases, heaters must be grounded in accordance with the *National Electric Code, ANSI/NFPA 70* in the USA, and the *Canadian Electric Code, CSA C22.1* in Canada, and must comply with all local requirements.

If any of the original wire as supplied with the heater must be replaced, it must be replaced with wiring having a rating of at least 105°C temperature service and 600 volts capability.

For internal wiring refer to wiring diagram in Figure 13Error! Reference source not found..

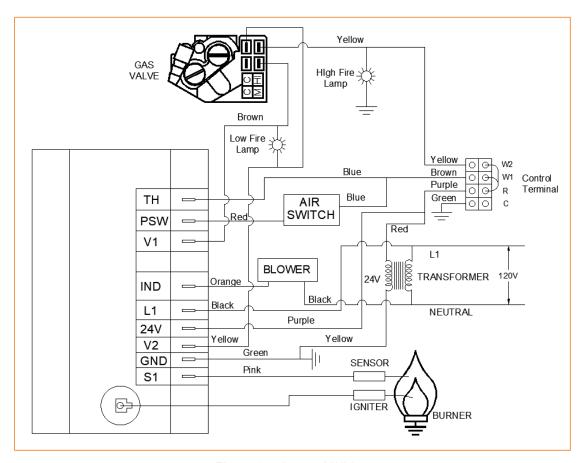


Figure 13: Internal Wiring

Controls

Heaters are equipped with a control terminal, featuring these connections:

- R 24Vac supplied from heater transformer.
- C ground connection. This terminal is used when a 24Vac thermostat controls the heater. In the case of a battery powered thermostat this terminal is not used.
- W1 return from thermostat to turn the heater on and operate the low fire.
- W2 return from thermostat to turn on the high fire.

The heater is equipped with two jumpers, R-W1 and R-W2. If heater is powered without removing these jumpers, heater will operate at high fire.

A bulkhead fitting in the back panel of the control box is provided for the appropriate wire.

Thermostat control

Heaters are normally controlled with a two-stage thermostat. To connect with a two-stage thermostat these jumpers should be removed. Connect control wires between respective terminals with the same designation to heater control terminal and thermostat terminal.

If a single stage thermostat is used, thermostat needs to be connected at R & W1. In this case the heater will operate at low fire. Adding a jumper between W1 and W2 will operate the heater at high fire.

Other methods to control the heater.

- Using two switches. ON/OFF and High / Low.
- Using a timer with an OFF feature and a switch for High / Low control.
- Using a two-stage switch (EE020)
- Using a 120Vac line thermostat. The post purge feature is not utilized in this control method.

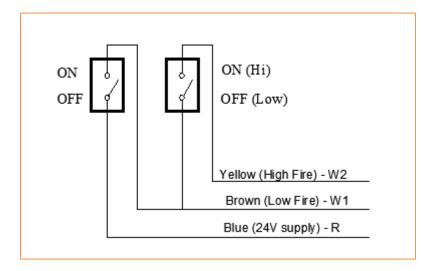


Figure 14. Wiring diagram using two manual switches

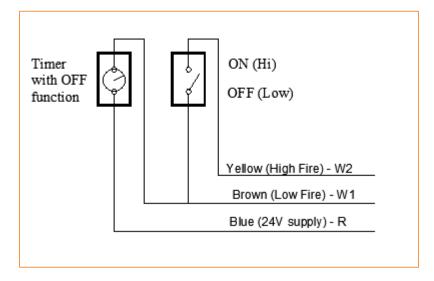


Figure 15. Wiring diagram using timer and switch

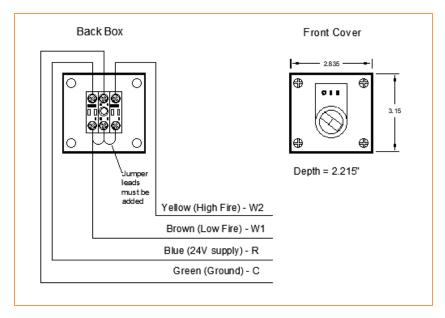


Figure 16. Wiring diagram using a two satge switch

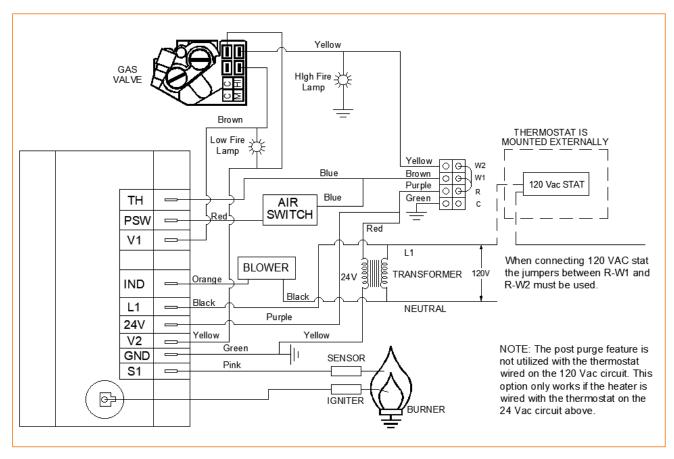


Figure 17. Wiring diagram using a 120Vac line thermostat.

Operation / Maintenance

Starting Sequence of Operation

- Turn the thermostat up. When the thermostat calls for heat, the blower motor will energize.
- When the motor approaches nominal running RPM, the air-proving switch closes and activates the ignition module.
- The ignition module, after a pre-purge period of approximately 30 seconds, energizes the igniter. Additionally, the gas valve is energized for this ignition trial period of 15 seconds.
- If a flame is detected, the ignition sensing rod "reads" a rectification signal and the gas valve remains open. The sparking stops when the flame signal is established.
- If no flame is detected, the gas valve closes, and a 30 sec inter-purge period begins. After the inter-purge, the module repeats the trial for ignition period. If flame is still not established, a third and final inter-purge followed by a final ignition trial cycle begins. After three trials, the module will lockout for a period of approximately 1 hour or until reset. (Reset is accomplished by removing power from the module for at least 5 seconds.) After this 1-hour period, the module re-attempts the full ignition sequence.
- When using a 24V thermostat and the heat requirement has been met and the thermostat opens, the burner shuts off, but the fan continues to run for approximately 30 seconds. This is referred to as a post purge. This allows the products of combustion to be removed from the heat exchanger to avoid nuisance condensation and increase heat exchanger life.
- When using a line voltage thermostat and the heat requirement has been met and the thermostat opens, the burner and fan shut off with no post purge.

Maintenance

For best performance, the following minimal maintenance procedures should be performed before each heating season:

- Before performing any service or maintenance, shut off gas and electrical supply to heater.
- Check condition of forced air blower scroll and motor. Dirt and dust may be blown or vacuumed from the blower.
- Check condition of burner. Remove any foreign objects or debris from inside the burner box or burner cup.
- Inspect the igniter. Replace igniter if there is excessive wear or erosion, breakage or other defects.
- Check inside the heat exchanger tube visually with a flashlight. If carbon or scale are present, scrape or otherwise remove deposits (a wire brush works well).
- Be sure the burner observation window is clean and free of cracks or holes. Clean or replace as necessary.
- Check the flue pipe for soot or dirt and reattach to the heater after cleaning as necessary.
- The heat exchanger reflector sections may be cleaned by wiping with a damp cloth.
- A service agency qualified to adjust and repair infrared heaters should be engaged for service other than routine maintenance.
- Be sure vent terminal and fresh air inlet are free from obstructions. If either pipe is restricted, the safety air switch will not operate properly, and the heater could fail to operate.

Series GRT Page 20 LT327 Jan. 26, 2023

Trouble Shooting

Blower Motor Fails to Run

- Is the thermostat calling for heat? Is there 115V at the burner receptacle?
- Check blower side door for seal. Repair as necessary.
- Check blower for obstructions. Replace blower if necessary.

No Gas Supply


- Check to see if manual supply valve to heater is ON.
- Check to see if gas valve knob on heater gas control is ON.
- Supply gas pressure can be checked at 1/8" NPT pressure tapping in gas supply system.
- Is combination gas control opening? No manifold pressure indicates valve is closed. Gas pressure
 downstream of gas control can be measured by connecting a manometer to pressure tap on control. If the
 valve is closed, either the gas valve or the ignition module is faulty.

Burner Does Not Light


- Is spark visible through site glass during ignition trial? If no, further electrical checks by a qualified service
 person are probably necessary.
- Check to see if gas lines were properly purged of air.
- Check inlet and outlet gas pressure during ignition period.
- · Check for orifice and air plate obstruction.

Burner Does Not Stay Lit

- Check ground wire continuity.
- · Check insulation on the igniter leads.
- Measure flame signal current; it should be above 0.8 micro amps DC.
- Replace module if necessary.

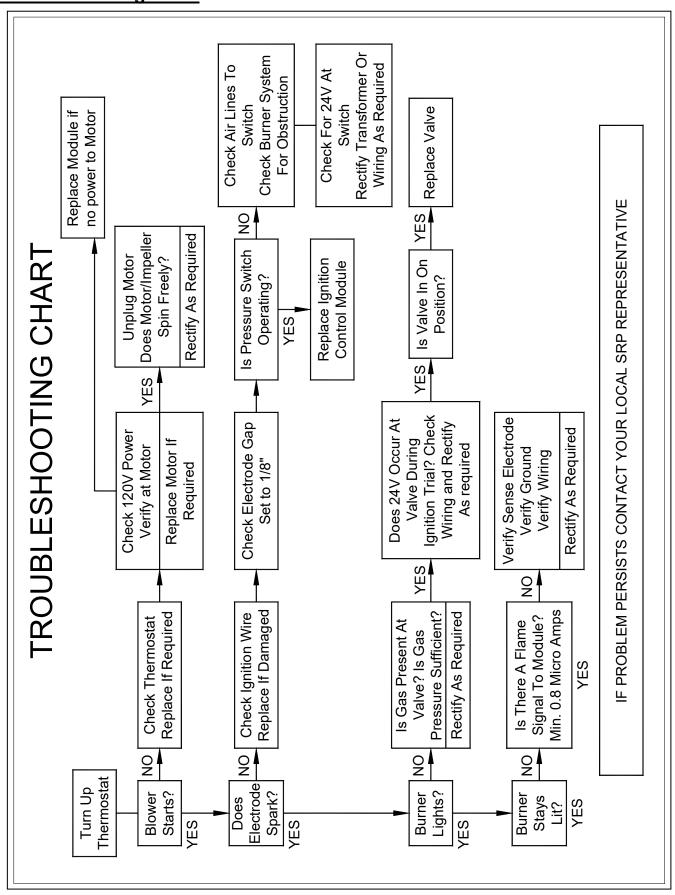

Replacement Parts

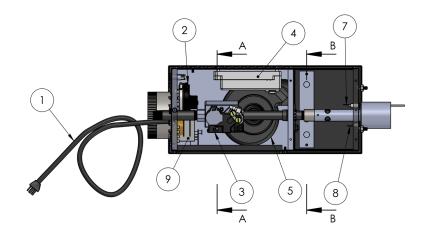

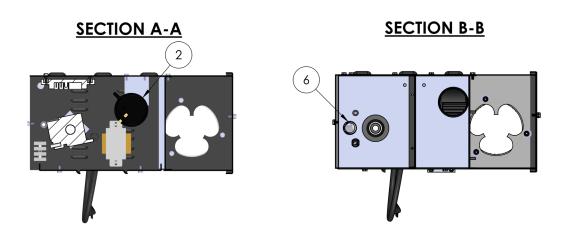


Figure 18: Replacement Parts

ITEM#	PART#	DESCRIPTION
1	RP-CE010	Power Cord
2	RP-CE158	Pressure Switch
2	RP-RG052	Valve Train – W/R – Nat
3	RP-RG053	Valve Train – W/R – LP
4	RP-CE015	Ignition Module

ITEM #	PART#	DESCRIPTION
5	RP-CE011	Blower Motor
6	RP-CH011	Sight Glass Assy
7	RP-CE003	Flame Sensor
8	RP-RE019	Ignitor
9	RP-CE008	Transformer
Not Shown	RP-CE006	Ignition Wire

SERIES GRT INFRARED HEATERS WARRANTY

The Manufacturer warrants to the original owner that the product will be free of defects in material and workmanship. This warranty is limited to 36 months from the date of installation for all components.

The Manufacturer's obligation under this warranty is limited to repair or replacement, F.O.B. the factory, of the defective part. In the case of replacement parts, the warranty period shall be the longer of the original warranty or a period of 12 months from the date of purchase. In no event shall the Manufacturer be liable for incidental expense or consequential damages of any kind.

This warranty does not cover any shipping, installation or other costs incurred in the repair or replacement of the product. No materials will be accepted for return without authorization.

This warranty will not apply, if in the judgment of the Manufacturer, the equipment has been improperly installed, unreasonably used, damaged or modified.

This warranty will not apply to damage to the product when used in corrosive atmospheres and in particular atmospheres containing halogenated hydrocarbons. No person is authorized to assume for the Manufacturer, any other warranty, obligation or liability.

THE REMEDIES PROVIDED FOR IN THE ABOVE EXPRESS WARRANTIES ARE THE SOLE AND EXCLUSIVE REMEDIES. NO OTHER EXPRESS OR IMPLIED WARRANTIES ARE MADE INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANT ABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE.

Address questions to your loca	l distributor/ or	Superior Radiant Products Ltd Stoney Creek, Ontario 1-800-527-4328
Heater Series :	_	
Installed Rate :	_Btu/Hr	
Serial Number:	_	
Installed Date :	_	
nictariou Bato .	_	